



Safety Information Sheet

4975 State Route 71, Oswego, IL 60543 • FirstPlaceRental.com • Call us at 630-554-3155

Vibratory Compactor

WARNING! Before starting the engine remove your feet from the danger area of the base plate.

WARNING! Exhaust gases are highly dangerous! Always ensure adequate supply of fresh air when starting in closed rooms!

STARTING THE ENGINE

WARNING! The engine is fitted with a facility to protect against low oil levels. The engine cannot be started if the oil level is too low or stops during operation.

WARNING! The machine must only be operated with the steering rod folded down.

WARNING! Never let the machine run unattended.

1. Open fuel cock fully until the final stop.
2. Move throttle lever to 1/3 throttle position.
3. Switch ignition switch to "ON"
4. Gently pull the starter handle until resistance can be felt, then pull it firmly, but do not pull it out completely.
5. Guide the starter rope back to the starting position by hand.
6. If the engine does not start at the first attempt, repeat the starting process.
7. When the engine is warm, gradually open lever 2 of the choke and return throttle lever to the idling position.
8. Move throttle lever in the direction of the arrow until it reaches the full speed position. The vibratory plate operates at maximum frequency.

CAUTION! Only operate the vibratory plate at full speed, otherwise the centrifugal clutch will burn out.

SHUTTING DOWN THE ENGINE

1. Move throttle lever to idling position.
2. Switch the ignition switch to "OFF" ; the engine comes to a standstill.
3. Close fuel cock.