

Plate Compactor, Reversible

WARNING!!

Only trained and instructed persons 18 years or older are permitted to operate this machine.

Wear personal protection for ears and feet.

While starting machine move your feet out of the danger zone of the base plate.

Always ensure an adequate supply of fresh air when starting in closed rooms.

Machine must only be operated with steering rod folded down.

Never let machine run unattended.

Starting Engine

Warning! The engine is equipped with a low oil level safety feature. If oil level is too low, the engine cannot be started.

- Open fuel cock valve by turning in direction of arrow.
- Close choke by shifting lever in direction of arrow.
- Shift throttle lever to position "MAX".
- Turn ignition switch 1 to position "ON".
- Pull the rope by the starter handle until resistance can be felt, return to start position, then pull quickly and powerfully.
- Slowly open choke while engine is warming up.
- Move the throttle lever back to idle speed position.

3.9 Work/operation

Note

Operation of the vibratory plate can be started as soon as the engine responds to short throttle commands.

Danger

Danger of accident!

Operate the machine only with the steering rod folded down.

Guide the machine only by the steering rod.

Wear your personal noise protection (ear defenders).

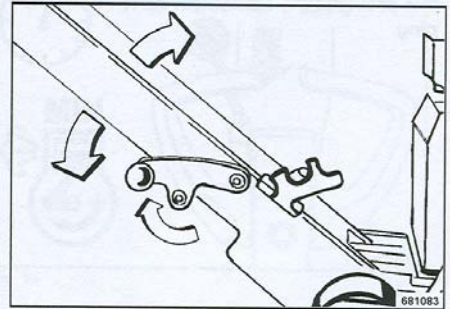


Fig. 20

- Pull the locking lever (Fig. 20) up and fold the steering rod down.

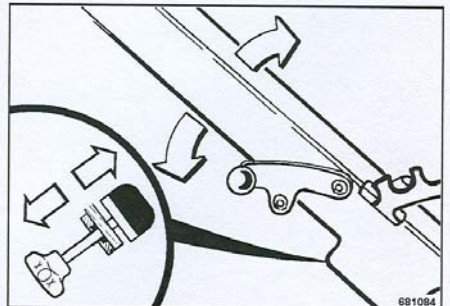


Fig. 21

- Adapt the steering rod to the desired body height using the height adjustment (Fig. 21).

Plate Compactor, Reversible

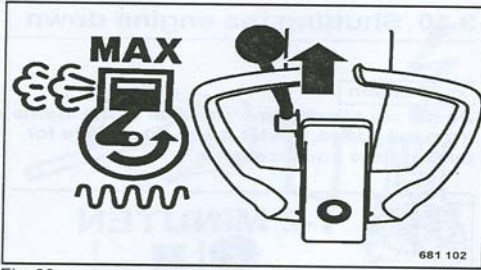


Fig. 22

- Shift the throttle lever (Fig. 22) to position "MAX".
- Operate the vibratory plate only with full engine speed, as otherwise the centrifugal clutch will be destroyed.

i Note

For short breaks you should always return the throttle lever to idle speed position, this avoids premature wear of the centrifugal clutch.

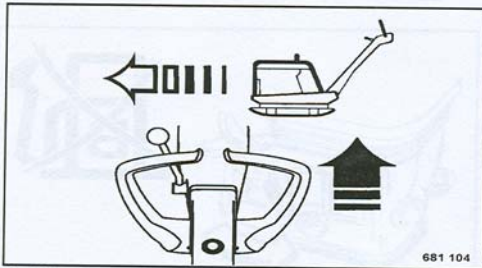


Fig. 23

- Move the travel lever (Fig. 23) forward, according to the desired speed.

i Note

If the machine moves forward with considerably reduced speed, pull the travel lever completely back and shift it forward again.

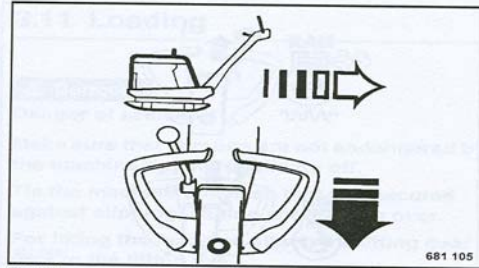


Fig. 24

- Move the travel lever (Fig. 24) backwards, according to the desired speed.

i Note

The machine vibrates forward or backwards with a speed, which is in accordance with the chosen travel lever position.

⚠ Danger

Danger of accident!

As a measure to avoid injury the machine must only be guided from the side by the steering handle

Vibratory plate getting stuck

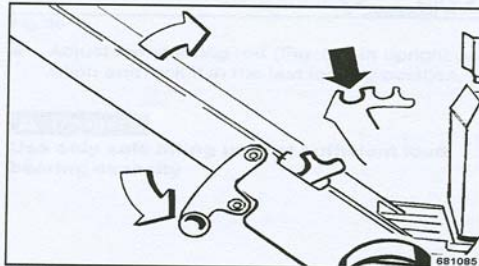


Fig. 25

- Lock the steering rod (Fig. 25) in the first locking position.

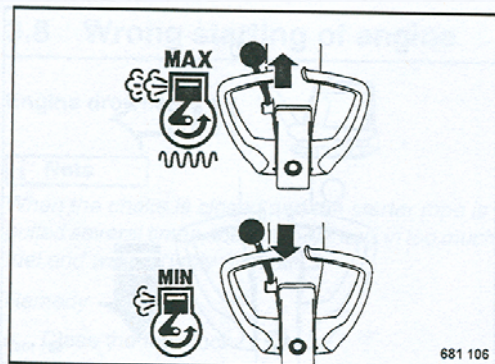


Fig. 26

- Keep moving throttle lever (Fig. 26) between "MIN" und "MAX" throttle.
- At the same time pull the vibratory plate by the steering rod to the right and left, until it comes free.