

PALLET JACK

*** WARNING ***

- Do not place hands or feet under the pallet truck at any time.
- Do not operate a loaded pallet jack on ramps or inclines
- Do not tip load pallet truck forks. May cause personal injury if the rear of the pallet truck suddenly “pops up”
- Never leave a loaded pallet truck unattended in the raised position. Always lower to the floor
- Secure load before transporting
- To prevent accidental tipping, make sure load is centered on the forks.
- Do not move a loaded pallet truck by other than manual force.
- Failure to comply with these warnings may result in personal injury and /or property damage.

Operation

To raise the forks, push lever down and pump the handle to the desired height.

To lower forks, pull lever up. The lever is spring loaded and will return to the neutral position.

To freely move the handle, set the lever in the center neutral position.

To lift a load:

1. Lower forks to lowest position.
2. Insert forks under load or into pallet.
3. Push the lever down.
4. Move handle up and down until forks reach desired height.

To move a load:

1. Place lever in center neutral position.
2. Pull or push to desired location.

To lower a load:

1. Pull lever up.
2. Pull forks away from load.

