


DT6000HD CAR CARRIER LOADING INSTRUCTIONS




Caution: When loading and unloading Car Carrier, be certain towing vehicle and trailer are parked level with towing vehicle brake set.

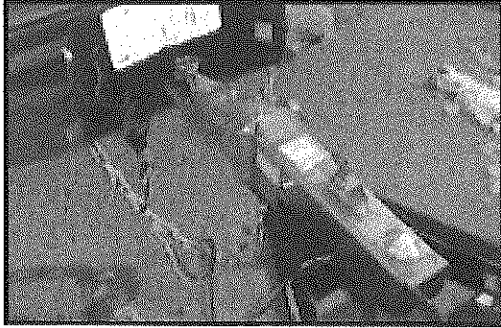


1. Be sure trailer is properly hooked to towing vehicle with emergency brake set before loading. Secure ball hitch to a 6000 lb. 2" towing vehicle ball **ONLY**. Make sure ball coupler is tightened around ball. Criss-cross safety chains under tongue and secure to towing vehicle frame. Attach emergency brake lever cable to towing vehicle. Connect trailer electrical plug to towing vehicle plug.

2. Trailer is equipped with bed lock down system. Release bed lock-down.

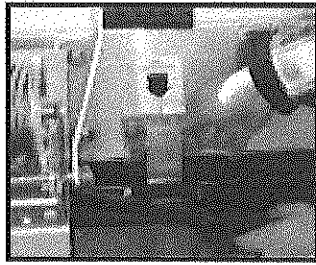

3. Jack up bed with screw jack until rear of trailer touches the ground or screw jack is fully extended.

4. Pull pins on tailgate storage bar to unlock tailgate and lower the tailgate to the ground.

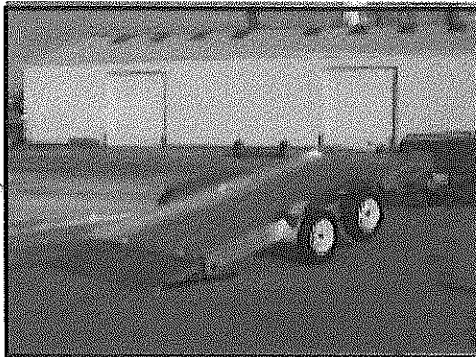

5. Guide car onto trailer. **NOTE: Engine must be toward FRONT of the trailer.**



6. **CENTER VEHICLE ON TRAILER FLATBED.** Place car in park and set emergency brake.

7. Jack front of trailer bed down. Bed hold-down will lock automatically. Visually check automatic lock-down.

8. Check to see that car is in park and emergency brake is set.


Note: ALL VEHICLES MUST BE SECURED TO TRAILER BEFORE TRANSPORTING.

9. Tie back of car down with tow chains in floor boxes at rear of trailer. Fasten chains securely to the axle. Pull up snug.



10. Remove winch lockpins from the chain winches at the front of the trailer. Feed chain through the opening in or over bulkhead just above winch and fasten securely to the front frame or axle of car. Ratchet winches until chains are tight, this will also tighten the rear chains. Reinsert winch lockpins.

Note: Check chains for tightness every 100 miles.

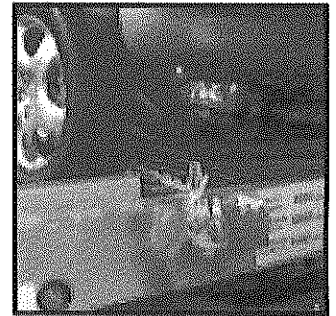

11. Raise tailgate to transport position and lock in place with lockpins.

12. **Unloading** - Reverse procedure in this order: If equipped with Tie-Down package: Remove winch lockpins from front winches and release the chains from the front of the car. Remove tow chains from the rear of car and place chains in storage boxes at rear of trailer. Lower tailgate. Release the bed lockdown latch, and begin to jack up bed with screw jack until the rear of trailer touches the ground or screw jack is fully extended. Release towed vehicle brake and back car off trailer.

- Do not load towed vehicle with cargo. Towed vehicles exceeding weight limits will overload DT6000HD and may cause serious injury and damage.
- Criss cross safety chains under tongue, secure to mounting loops on towing vehicle.
- Secure emergency brake actuator cable to mounting loop on towing vehicle.
- Beware of bystanders, **PARTICULARLY CHILDREN!** Always look around to make sure it is safe to start engine of towing vehicle or move unit. This is particularly important with higher noise levels, as you may not hear people shouting.
- **NO PASSENGERS ALLOWED-** Do not carry passengers anywhere on or in towed unit.
- When halting operation, even periodically, set towing vehicle parking brake, shut off engine, and **remove ignition key.**
- Be extra careful on inclines.
- **MANEUVER TOWING VEHICLE AT SAFE SPEEDS. DO NOT EXCEED 45 M.P.H.**
- Avoid overhead wires or other obstacles. Contact with overhead lines could cause serious injury or death.
- Avoid loose gravel, rocks, and holes; they can be dangerous for unit operation or movement.
- Allow for unit length when making turns.
- Do not work under raised components or attachments unless securely positioned and blocked.
- Keep all bystanders and pets clear of work area.
- Operate towing vehicle from operator's seat only.
- As a precaution, recheck hardware on DT6000HD every 50 miles, and correct all problems. Follow maintenance safety procedures.



FOLLOWING OPERATION

- Following operation, or when unhitching, stop towing vehicle, set parking brake, shut off engine and **remove ignition key.**
- Store DT6000HD in area away from human activity.
- Do not permit children to play on or around stored DT6000HD.
- Make sure parked DT6000HD is on hard, level surface.
- Wheel chocks may be needed to prevent unit from rolling.



HIGHWAY AND TRANSPORT OPERATIONS

- Adopt safe driving practices:
 - Always drive at safe speed relative to local conditions and ensure that your speed is low enough for an emergency stop. **Do not exceed 45 M.P.H.**
 - Reduce speed prior to turns to avoid risk of overturning.
 - Always keep towing vehicle in gear to provide engine braking when going downhill. **Do not coast.**
 - **Do not drink and drive!**

- Comply with state and local laws governing highway safety.
- Local laws should be checked for all highway lighting and marking requirements.
- Plan your route to avoid heavy traffic.
- Be a safe and courteous driver. Always yield to oncoming traffic in all situations, including narrow bridges, intersections, etc.
- Watch for obstructions overhead and to both sides while transporting.
- Operate with maximum visibility at all times. Make allowances for increased length and weight of DT6000HD when making turns and stopping.



BEFORE OPERATION:

- Carefully study and understand this manual.
- Keep wheel and lug nuts tightened to specified torque.
- Assure tires are inflated evenly.
- Give unit a visual inspection for any loose bolts, worn parts, or cracked welds, and make necessary repairs. Follow maintenance safety instructions included in this manual.
- Be sure there are no tools lying on or in DT6000HD.
- Do not use unit until you are sure that area is clear, especially around children and animals.
- Don't hurry learning process or take unit for granted. Ease into it and become familiar with your new DT6000HD.
- Practice operation of your DT6000HD and its attachments. Completely familiarize yourself and other operators with its operation before using.
- Make sure that brakes are evenly adjusted.
- Securely attach to towing vehicle. Use an appropriately sized and rated hitch ball and attach safety chains.
- Do not allow anyone to stand between tongue or hitch and towing vehicle when backing up to unit.
- Make sure tow rating on vehicle is high enough for what it is towing.



DURING OPERATION

- **SAFETY CHAIN** - Always follow state and local regulations regarding safety chains and auxiliary lighting when towing. Be sure to check with local law enforcement agencies for your own particular regulations. Only safety chains (not elastic or nylon/plastic tow straps) should be used to retain connection between towing vehicle and towed unit in event of separation.