

ELECTRIC PRESSURE WASHER

Injection hazard: equipment can cause serious injury if the spray penetrates the skin. Do not point the gun at anyone or any part of the body. In case of penetration seek medical aid immediately.

- This system is capable of producing 1300 psi/9 MPa. To avoid rupture and injury, do not operate this pump with components rated less than 1300 psi/9,0 MPa working pressure (including but not limited to spray guns, hose and hose connections).
- Before servicing, cleaning, or removal of any part, shut off power and relieve pressure.
- Do not spray electrical apparatus and wiring.
- High Pressure. Keep clear of nozzle

OPERATION:

- ☑ Plug the Ground Fault Circuit Interrupter (GFCI) into a working outlet.
- ☑ Press "TEST", then press "RESET" to assure proper connection to power.

DO NOT USE EXTENSION CORD WITH THIS PRODUCT!!

☑ **DANGER**

Risk of explosion! Do not spray flammable liquids. If the appliance is used in hazardous areas (e.g. filling stations) the corresponding safety regulations must be observed.

☑ **CAUTION**

Environmental damage. Clean motors at places with a corresponding oil separator only.

The appliance can be operated in the horizontal or upright position. **Note:**

The appliance is equipped with a pressure switch. The motor starts up only when the lever of the pistol is pulled

- ☑ Set the appliance switch to "I".
- ☑ Unlock the trigger gun and pull the lever of the gun.
- ☑ Release the lever of the trigger gun; the device will switch off.
- ☑ Pull again the lever of the trigger gun; the device will switch on again.

TURN OFF UNIT

Set the appliance switch to "0".

- ☑ Shut off water supply.
- ☑ Activate trigger gun until device is pressure-less.
- ☑ Press the safety lever of the trigger gun to secure the lever of the pistol against being released accidentally.
- ☑ Place the spray lance with the trigger gun into the quiver for the spray lance and snap it into place in the spray lance holder.
- ☑ Wind the connection cable around the cable holder.
- ☑ Fasten the plug with the mounted clip.
- ☑ Slide in push handle.