

## Generator

### TO START ENGINE:

- Make sure all appliances are disconnected from the AC receptacles.
- Turn fuel valve lever to the ON position.
- Pull the choke rod out to the CLOSED position for starting a cold engine. Do not use choke if engine is warm or the temperature is high.
- Turn Switch to ON position.
- Pull the starter grip lightly until resistance is felt, then pull briskly. Do not allow the starter grip to snap back against the engine. Return it gently.
- Gradually Push the choke rod to the OPEN position as the engine warms up.

### TO STOP ENGINE:

- Turn Engine Switch to OFF position.
- Turn Fuel valve lever to the OFF position.

### AC CIRCUIT BREAKER

The AC circuit breaker will automatically switch OFF if there is a short circuit or an overload of the generator at the AC receptacle. If the AC circuit breaker is switched OFF automatically, check that the appliance is working properly and does not exceed the rated load capacity of the AC circuit before switching the AC circuit breaker ON again.

### GFCI RECEPTACLE

The ground fault circuit interrupter can be identified by the TEST and RESET buttons. To restore power, depress the RESET button. The RESET button should be flush with the base.

### FUEL

Use unleaded gasoline with a pump octane rating of 86 or higher. Do not overfill.