



Safety Information Sheet

4975 State Route 71, Oswego, IL 60543 • FirstPlaceRental.com • Call us at 630-554-3155

Miller Power Buggy

****WARNING****

**NEVER STAND ON ANY PART OF THE BUGGY OTHER THAN THE RIDER PLATFORM
NEVER GET ON OR OFF THE BUGGY WHILE IT IS MOVING
NEVER LEAVE THE BUGGY UNATTENDED WHILE IT IS RUNNING
ALWAYS ENGAGE THE PARKING BRAKE WHEN LEAVING THE BUGGY
KEEP YOUR HANDS, FEET AND CLOTHING AWAY FROM ALL MOVING PARTS AND HOT SURFACES OF THE BUGGY**

STARTING THE ENGINE

1. Set parking brake.
2. Place directional control lever on dash in NEUTRAL position.
3. To start a cold engine, move the choke lever to the CLOSED position. To restart a warm engine, leave the choke lever in the OPEN position.
4. Set throttle control to one-third open position.
5. Open engine fuel valve.
6. Switch engine ignition switch to ON position and pull the Recoil Starter.
7. When the engine starts, open choke lever to OPEN position. Let engine warm up for 5 minutes then pull throttle to full ON position.
8. Position steering wheel in position desired.
9. Release parking brake by stepping on brake pedal until parking brake lock rod moves to full up position. Then slowly release pressure on brake pedal.

NOTE: See Operating instruction label located on buggy handlebars.